

Reconyx Hyperfire PC800 Quick Guide

The complete manual for the camera can be found on the website under “How to Documents,” but this guide covers all typical camera deployment tasks.

Basic Operations for Deployment

When you open the camera up you will see 3 buttons, < and > and OK, as well as an on/off switch.

1. Make sure that a SD card is in the camera
2. Turn the switch to on
3. When the camera starts it will display the date, time, % of the card that is full, and the % charge of the batteries. If the date and time are incorrect set them using the Camera Programming Guide.
 - a. If the batteries are *below 60%* they need to be *replaced* before deployment!!
4. Push the > key once to navigate to *WALKTEST*. This is the setting you will use to measure the farthest distance of detection.
5. Once *WALKTEST* is selected the camera will stay on and a red LED light will display on the front of the camera, to the right of the lens, whenever the motion/heat sensor is triggered.
6. When you are done with the Walk Test, open the camera and push the OK button to exit the *WALKTEST* mode. Push the < button once to get the *ARM CAMERA* option. Push the OK button to arm the camera. The camera will start a 10 second countdown, accompanied by a flashing red light on the front of the camera, and then start taking pictures. Don't worry - If you accidentally leave the camera on *WALKTEST* it will automatically switch to *ARMED*.
7. Close the camera, do the pole test, and go on to the next camera!

